


DIYScreensDirect

KD Window Screen Kit Assembly Instructions

- 1) Unpack your window screen kit and lay out the parts.



- 2) Assemble frame by connecting the four pieces with the provided corner inserts. If you ordered lift tabs insert them in the spline groove in desired location.

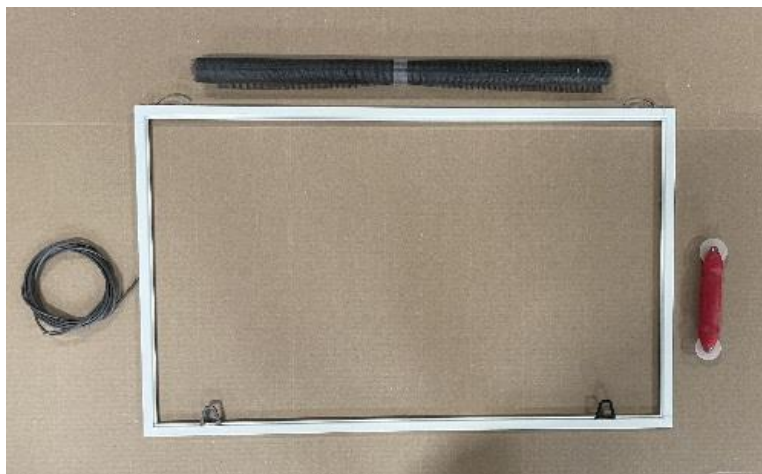

- 3) Lay screen cloth over frame, making sure there is an even overlap on the sides.



DIYScreensDirect

KD Window Screen Kit Assembly Instructions

- 4) Start spline in one corner using the provided spline roller tool.



- 5) Roll spline into spline groove on all sides.
- 6) Using a utility knife trim excess spline and screen cloth.



- 7) Install your new screen and enjoy!